

Resetting the driver's power window is required when any of the following have occurred:

- Power window regulator replacement or repair
- Driver's (or front passenger's) door glass replacement or repair
- Power window motor replacement or repair
- Window run channel replacement or repair
- Power is removed from the power window control unit while the power window timer is ON

1. Turn the ignition switch **ON**
2. Move the driver's (or the front passenger's) window all the way down by using the driver's window **DOWN** switch
3. Open the driver's door

**NOTE: Steps 4 to 7 must be done within 5 seconds of each other**

4. Turn the ignition switch **OFF**
5. Push and hold the driver's (or the front passenger's) window **DOWN** switch
6. Turn the ignition switch **ON**
7. Release the driver's (or the front passenger's) window **DOWN** switch
8. Repeat steps 4 to 7 three more times
9. Wait 1 second
10. Confirm AUTO UP and AUTO DOWN **DO NOT** work. If AUTO UP and DOWN work, go back to step 1
11. Move the driver's (or the front passenger's) window all the way down by using the driver's (or the front passenger's) window **DOWN** switch
12. Pull up and hold the driver's (or the front passenger's) window **UP** switch until the window reaches the fully closed position, then continue to hold the switch for 1 second.
13. Confirm that the power window control unit is reset by using the driver's (or the front passenger's) window **AUTO UP** and **AUTO DOWN** functions

If the window still does not work in AUTO, repeat the procedures several times, paying close attention to the 5 second time limit between steps.

If the window still does not work after all the above, refer to the master switch input test.

## 07 3267 8998

[www.powerwin.com.au](http://www.powerwin.com.au)

