

Scissor Style Regulator Key Points



1. DO NOT operate the Window Motor until COMPLETELY assembled in the door.

- 2. The Window Bailey Channel MUST be lubricated with a QUALITY SILICONE SPRAY or GRAPHITE POWDER
- If fitting a motor only, service the regulator with some grease on the sliders and the teeth of the regulator.
- 4. It is VERY IMPORTANT that the Adjuster Arm (normally around 6" or 15cm long) is adjusted so that the glass is in alignment with the A & B Pillar. Some doors are frameless and therefore may require more alignment. Check the side to side alignment also the alignment of the glass when the door and glass are both in the closed position.
- All though we provide 12 months warranty, premature wear and tear will not be seen as warranty claim as it will be considered that the glass or the regulator were not fitted or aligned correctly.
- 6. A "Cooked" motor (or burnt out motor) will also hold no warranty as this would be a result of a switching electrical fault, or a labouring motor due to alignment problems.

If you have any problems, please feel free to contact us on 07 3267 8998.



